
EVADE 106 186 cm

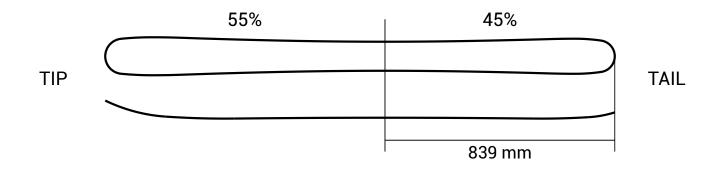

Boot center mounting point

The mounting point indicated on the ski represents the most balanced choice and the one we recommend.

This position is marked with a small line punched on both sidewalls of the ski.

Based on your preferences, you can decide to move the mountig position, taking care to stay within the **safe mounting area**.

Drill bit specification

Ø4,1 x 9,5 mm (or 9 mm)

Holes sealing

Fill the holes with a sealant before inserting the screws to shield them from water infiltration. Most polyurethane adhesives work just fine. Avoid using classic PVA glue.

🔔 WARNING

This ski features a reinforcement patch designed for secure binding mounting.

Ensure that all the screws of the binding are placed within the safe mounting area.

New skis without pre-assembled bindings come with a removable sticker outlining the reinforcement patch.

The secure area can accommodate most binding, boot, and mounting-point combinations. However, exercise caution with extreme combinations.

We strongly recommend professional installation of the ski bindings.

Please note that any incorrect mounting placement may invalidate the warranty.

We do not assume responsibility for any issues resulting from incorrect installation.

If the sticker outlining the reinforcement patch is no longer present or if you have any doubts, please contact us at info@fugeskis.com before proceeding with the binding installation.